




Rival Mini Chopper MC-67BL Safety Latch Replacement

Remove the safety latch from the Rival Mini Chopper.

Written By: Roxanne

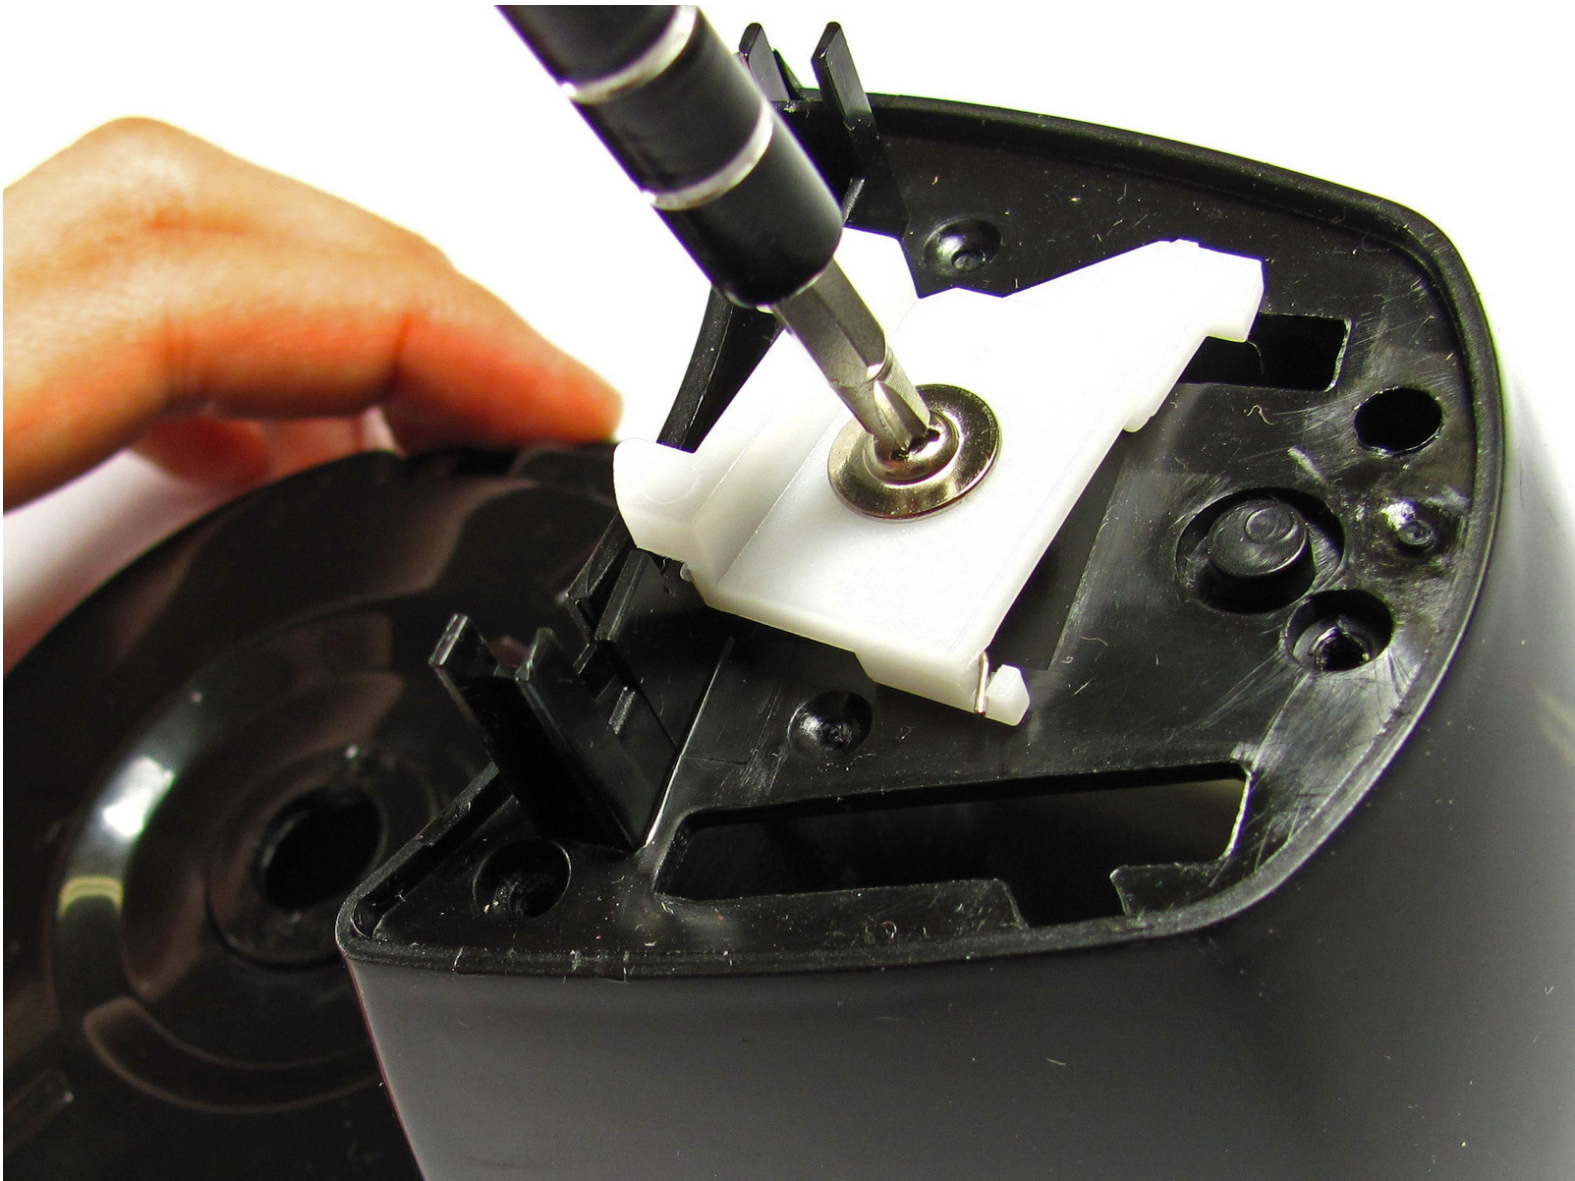

INTRODUCTION

This guide will help you remove the safety latch for the container lid.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Turning Gears



- Twist the plastic lid counterclockwise to unlock it.
- Lift the lid to remove it from the container.

Step 2



- Carefully remove the blade from the container.
- ☑ For reassembly, the teeth on the metal shaft line up with slots on the inside of the plastic hole.

Step 3



- With your hand, twist the container counter-clockwise until it unlocks from the base. Remove the container by lifting it straight up.

Step 4



- Use your fingers to pry out the two rubber feet from the bottom cover of the base.
- ⓘ The two feet furthest from the button tower contain screws. The other two feet do not.

Step 5




- Use the Phillips #2 screwdriver to unscrew the two 12.7-mm screws underneath the rubber feet.
- Use the same screwdriver to unscrew the 15.88-mm screw from the back of the chopper.

Step 6






- Firmly lift the bottom cover off of the base.

Step 7

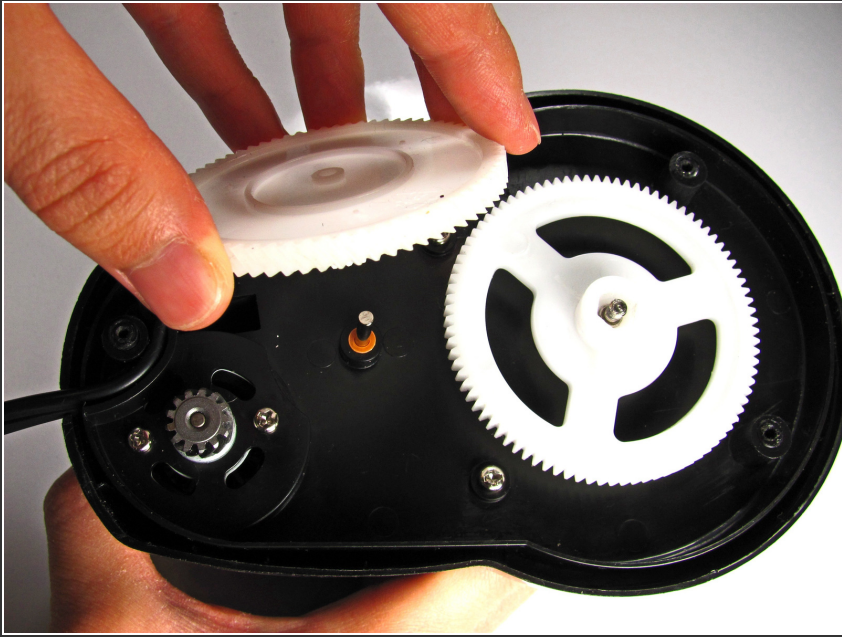


- Remove the smaller white gear by lifting it up with your hand.

Step 8

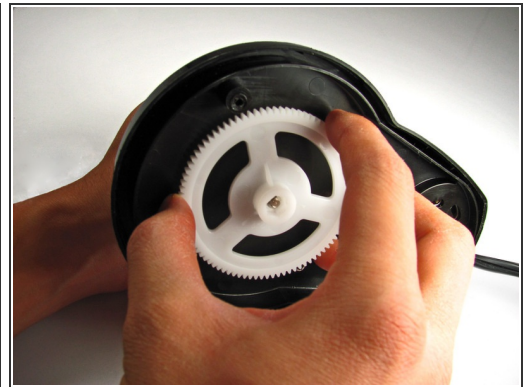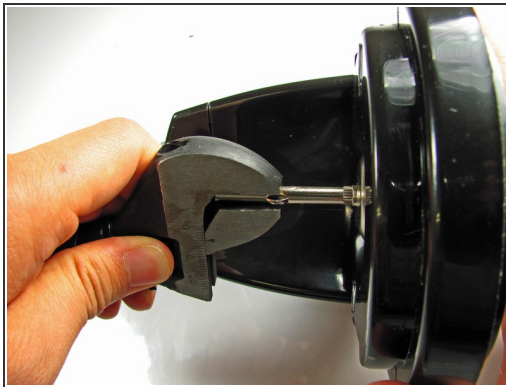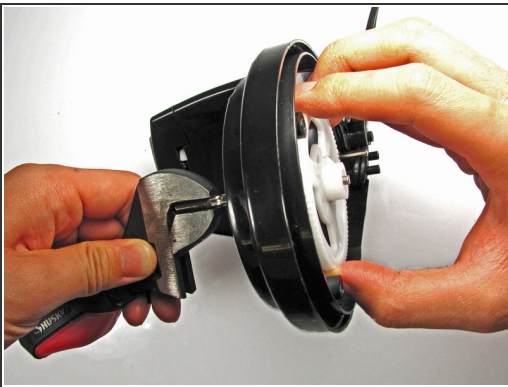

- Use a pair of pliers or any other clamping tool to securely hold the blade-shaft that sits above the base.

 Grab the gear with your other hand and turn **CLOCKWISE**. Unlike most screws, the gear is reverse-threaded to allow the blade to spin.


- Continue turning the gear until completely removed from the blade-shaft.

Step 9 — Power Button




- Use your hand to firmly pull the blade-shaft from the base.

Step 10

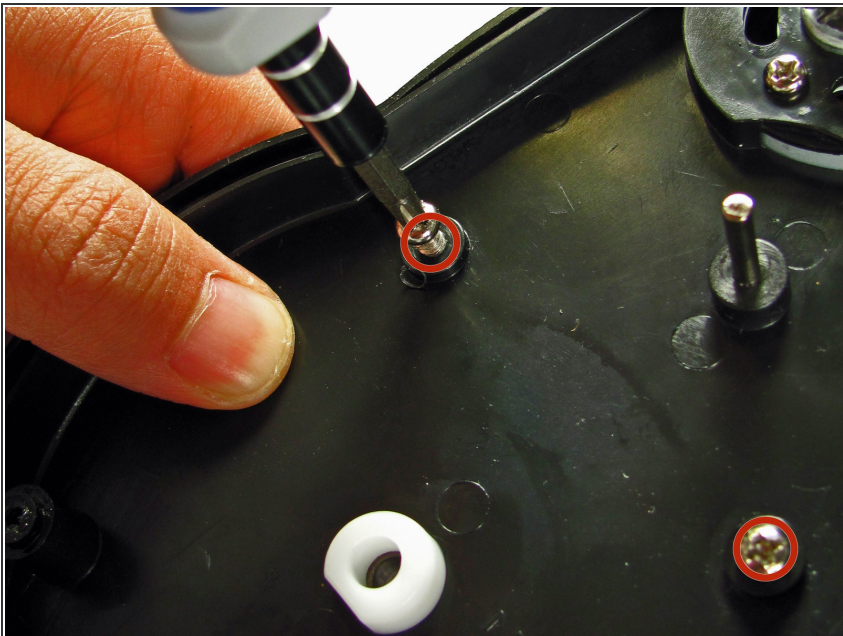

- Using Phillips #2 screwdriver, unscrew two 12.7-mm screws in the middle of the base.

Step 11

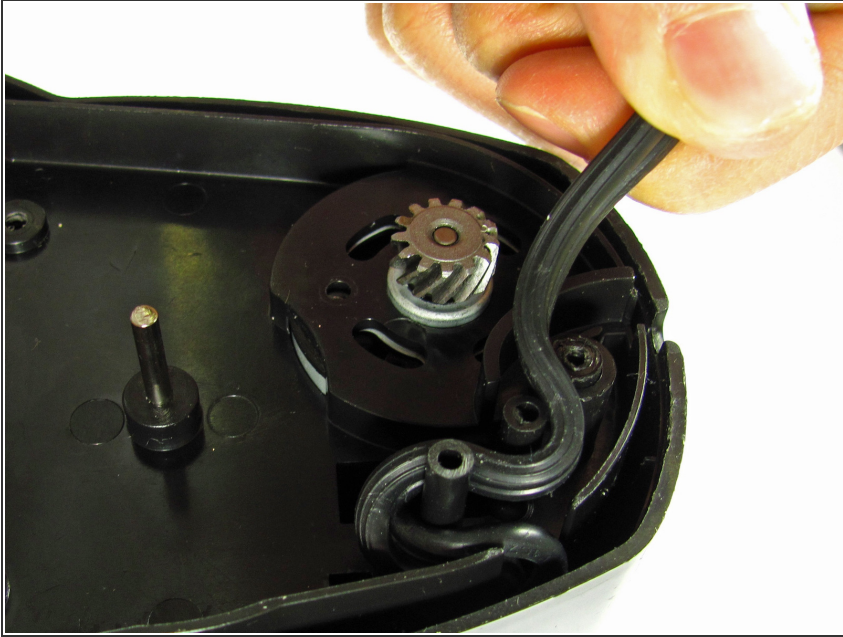


- Unwind power cord from the base pegs.

Step 12



- Use the plastic opening tool to pry open the base from the main body.
- ⓘ These two plastic prongs are pressed fit into the base. It may take some effort to pry the base completely off.
- Once freed, lift the base panel from the main body and set it aside.

Step 13

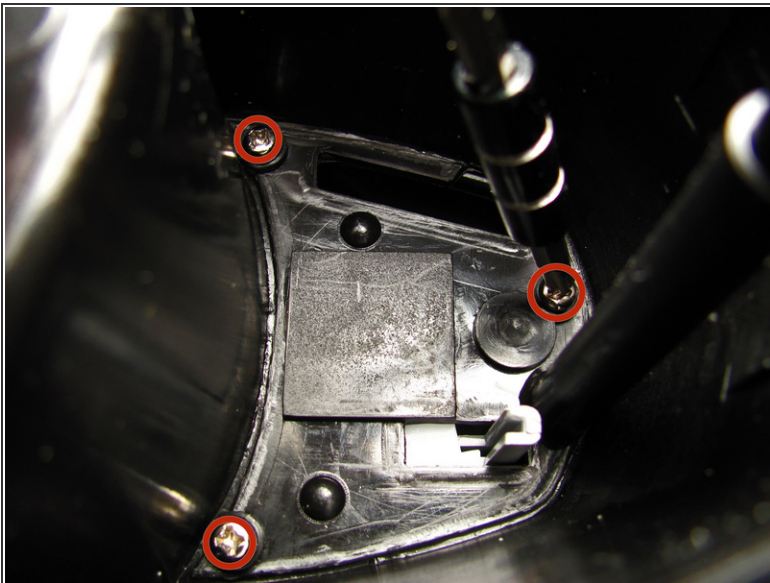

- Use a Phillips #2 screwdriver to remove the three 9.53-mm screws from inside the main body.
- Next, turn the device upright and lift the upper casing from around the button gently.


Step 14



- Remove the button by simply pulling it up.


⚠ Don't lose the spring under the button! Without it, the blender will not function.

Step 15 — Safety Latch

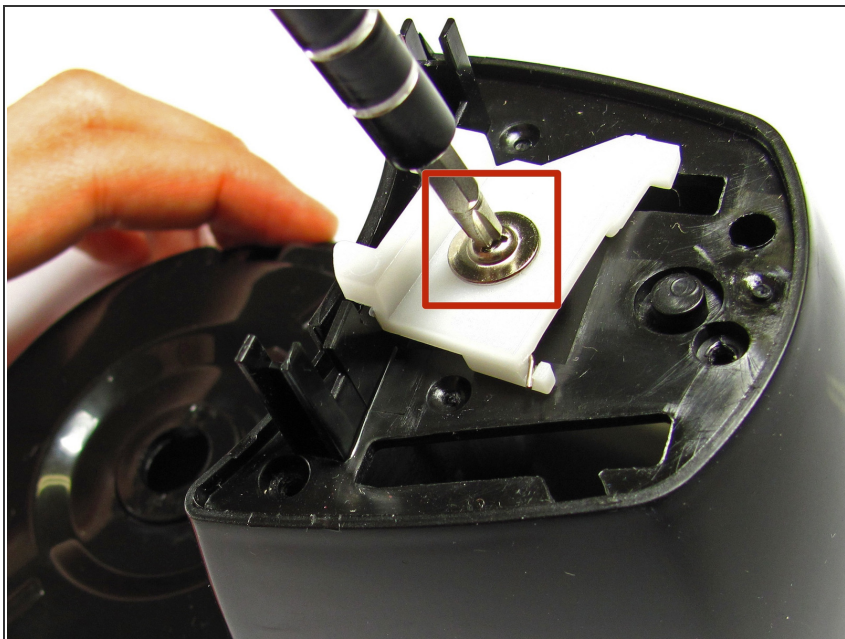

- Use the Phillips #2 screwdriver to remove one 9.53-mm screw.

Step 16

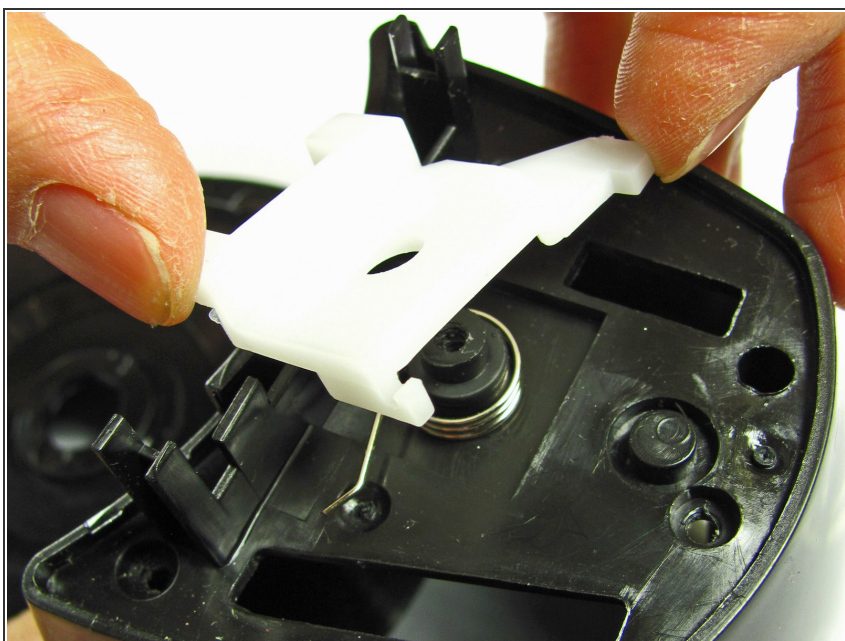

- Remove the white latch by unhooking it from the spring wire and gently lifting straight up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:50:21 AM.